



daisy.
COMMUNICATIONS

TP Link MR6400/MR600 SIP ALG switch-off guide


For the VoIP application, your Internet Service Provider (ISP) may ask you to disable SIP ALG on your modem router. Please refer to the following steps to complete the configuration.



TP Link MR6400/MR600 SIP ALG switch-off guide


Step One

Firstly, check that you are connected to the router and Wi-Fi network. Type in **192.168.1.1** in the internet search bar of your browser window, to bring up the TP Link Login page.

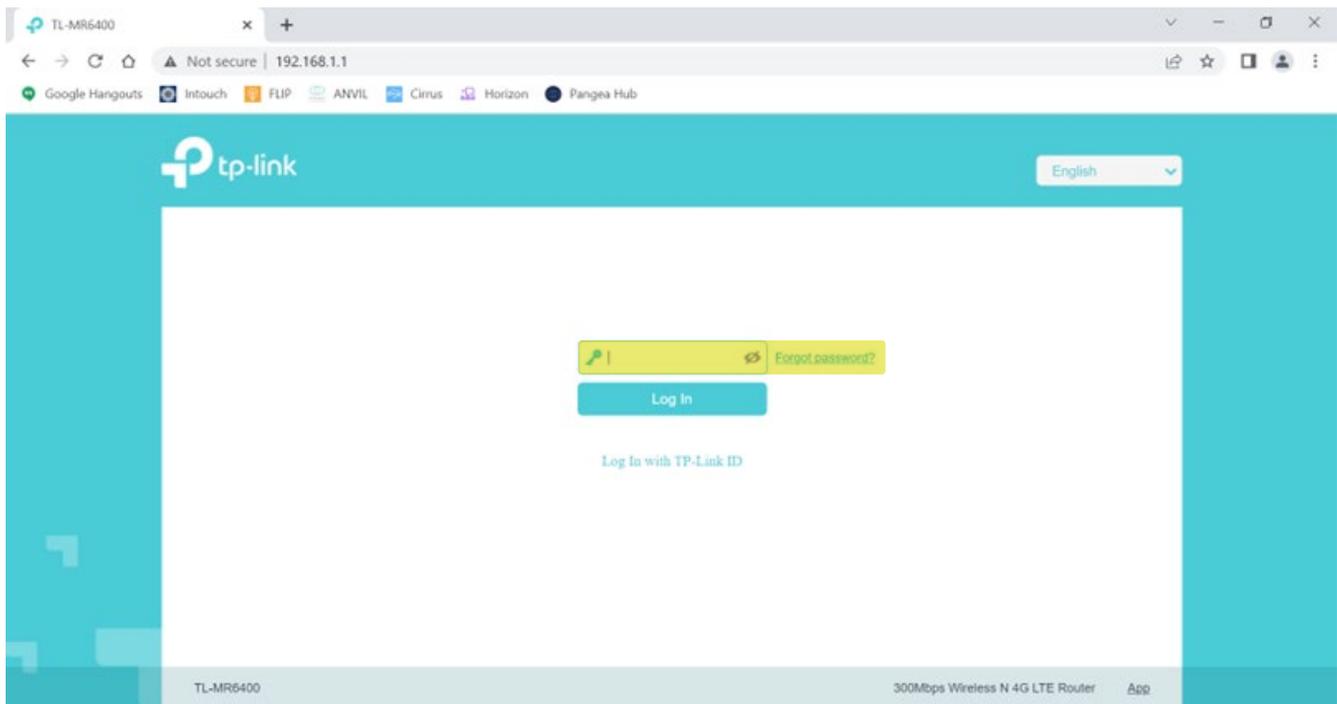

Step Two

Sign in with the default password which is set as 'admin' and the below home page should be displayed.

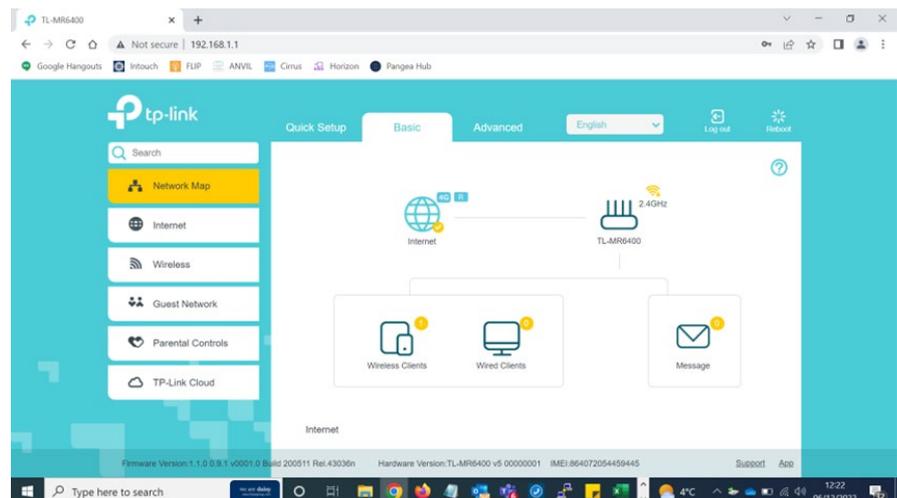

TP Link MR6400/MR600 SIP ALG switch-off guide

Step Three

Then click on **'Advanced'** in the top search options. Then find and select **'Nat Forwarding'** from the list of options on the left-hand column.

Deselect **'SIP ALG'** from the list as displayed below.

